

Initial Setup:

- (A). Turn switch on side of radio to ON.
- (B). Press MENU.
- (C). Press UP arrow until CHANNEL is displayed.
- (D). Press SELECT.
- (E). Press UP arrow to select your area weather station (7 for Chattanooga, 4 for Knoxville).
- (F). Press SELECT to save station selection.
- (G). Press MENU to close menu mode. To turn Weather/Hazard broadcast on again, press WEATHER/SNOOZE.

Programming The Clock:

- (A). Press "MENU" to open menu options.
- (B). Press "UP" arrow to scroll through menu until you see "TIME"
- (C). Press "SELECT" (hour option will begin flashing)
- (D). Press "UP" arrow until current hour is displayed. (Note: AM/PM changes as you scroll through the hours).
- (E). Press "RIGHT" arrow to save current hour and advance to minute settings.
- (F). Program the minutes the same way.
- (G). Press "SELECT" to store the current time. Press "MENU" to exit menu mode.

Programing S.A.M.E. Codes:

- (A). Press MENU button to open menu options.
- (B). Press the UP arrow to scroll through menu options until S.A.M.E. SET is displayed, then press SELECT button.
- (C). Press the UP arrow to scroll through: SINGLE, MULTIPLE, or ANY.
- (D). Display SINGLE, then press SELECT. S.A.M.E.01 will be displayed. Press SELECT.
- (E). Using the UP arrow, find the first digit of your S.A.M.E. County Code. Press the RIGHT arrow to save the digit and automatically advance to the next digit. Program all digits of your S.A.M.E. County Code in the same way.
- (F). Press SELECT to store your S.A.M.E. County Code. Press MENU to close the programming menu.

Choosing an Alert Type (DISPLAY, VOICE, OR TONE):

1. Press "MENU" button to open menu options.
2. Press "UP" arrow to scroll through menu options until "ALT TYPE" (Alert Type) is displayed, then press "SELECT" button.
3. Press "UP" arrow to scroll through the following (3) alert types: "DISPLAY", "VOICE", or "TONE", and select VOICE.
4. Press "SELECT" .
5. Press "MENU" to exit menu programming mode.