

## **Programming the MAXX DIGITAL S.A.M.E. Weather Radio**

### **Weather Radio Channels:**

Chattanooga = 162.550 = WXK-48

Knoxville = 162.475 = WXK-46

### **S.A.M.E. County Codes:**

Bradley = 047011 McMinn = 047107 Meigs = 047121 Monroe = 047123 Polk = 047139

Rhea = 047143

Put batteries in radio and place switch on right side of radio to ON position.

Press MENU.

To set TIME, Press SELECT, enter hours using up and down arrows (make sure to do AM or PM)

Press right arrow, set tens of minutes

Press right arrow, set minutes

Press SELECT

Press MENU

Press up arrow to COUNTY

Press SELECT

Up arrow to SINGLE or MULTIPLE

Press SELECT to SAME01

Enter county code using up, down, right, and left arrows

Form MULTIPLE codes, Press SELECT

Press up or down for SAME02

Press SELECT

Enter next code

When finished entering codes, Press MENU

Press MENU

Up or down to ALT TYPE

Press SELECT

Up or down to VOICE

Press SELECT

Press MENU

Press RADIO/SNOOZE

Press BAND until WEATHER is displayed

Press left or right to correct Weather Service Channel

Press RADIO/SNOOZE

Explain to customer to press RADIO and move radio around room to get best signal.

Explain that the ALERT will be the siren tone for 8 seconds, followed by voice for 3 minutes, then the radio will reset.

Remind customer to change batteries with smoke detector and after extended power outages.