SOP 1.0 Trailer Pick-Up & Transport

I	Trailer is norma	ally stored at Athens	Fire Station # 2 on	Congress Parkwayl
				2 3

Perform each of the following steps <u>in the order shown</u> and indicate completion of each step by placing a check (✓) in each box once the step is verified complete. If any step <u>cannot</u> be performed as stated, STOP and obtain help before proceeding.

☐ UNLOCK side door of trailer

☐ DISCONNECT power cable to trailer and place it inside trailer

- TURN OFF all breakers in the inside AC breaker panel **REMOVE** trailer hitch from floor inside trailer **INSTALL** trailer hitch to tow vehicle ensuring pin & clip are secure **CONNECT** tow vehicle to trailer ensuring ALL of the following: •Hitch latch is in the down position following connecting to towvehicle •Lock is placed in the latch to prevent tongue separating from the ball • Trailer lights cable is connected to tow vehicle • Trailer safety chains are connected to tow vehicle in a criss-cross fashion under the tongue so they do <u>not</u> drag (required by law) • Emergency stop (brake) cable is connected to tow vehicle • Trailer tongue leveling jack is fully retracted **REMOVE** tire chock blocks and leveling tongue block and place them inside the trailer TURN ONONEDC power switch to provide power to emergency stop (brake) (there are two DC switches under the countertop – turn on either one...NOT both) LOCK trailer side door CHECK all running and emergency lights on the trailer for proper operation CHECK all trailer tires ensuring chock blocks have been removed
- **CAUTION:** USE OF A SPOTTER IS HIGHLY RECOMMENDED

The trailer storage area is very narrow. Extreme caution must be exercised when pulling the trailer out so as NOT to come in contact with supports or adjacent emergency equipment. Pull trailer straight out until supports are cleared THEN swing tow vehicle wide right to exit the area.

	cleared THEN swing tow vehicle wi	de right to exit the area.
	PULL trailer clear of storage cover, TI	HEN
	CHECK for proper brake operation be	fore BEFORE entering public streets
The above st	eps were completed by:	Date:

! ADHERE TO ALL ROAD SAFETY PRACTICES WHILE PULLING TRAILER!

SOP 2.0 Trailer Placement & Setup for Operation

[Trailer may remain hooked to tow vehicle if quick relocation could be required. If this is the case, skip to Trailer Setup steps]

Perform each of the following steps in the order shown and indicate completion of each step by placing a check (\checkmark) in each box once the step is verified complete. If any step cannot be performed as stated, STOP and obtain help before proceeding.

☐ LOCATE a level spot for trailer placement clear of overhead obstructions, s as power lines and trees		
	PLACE scotch blocks against trailer wheels to prevent undesired movement (blocks are located in a tote bin inside the trailer)	
	PLACE trailer leveling tongue block in place under leveling jack	
PLACE leveling blocks as needed (various size wood blocks located in a tote bin in side the trailer)		
	DISCONNECT trailer lights cable from tow vehicle	
	UNHOOK trailer from towing vehicle and place hitch lock back in latch	
	LEVEL trailer utilizing leveling jack on trailer tongue	
TRAI	LER SETUP	
	UNLOCK side and rear trailer doors	
	REMOVE steps from inside rear door of trailer and place in front of side door	
	ESTABLISH electrical power to trailer as follows:	
	• If utility power is available to power the trailer, remove the power cable from inside trailer and connect one end to the receptacle on the outside of the trailer observing proper orientation of the twist-lok connector to the trailer receptacle. Connect the other end to the available electric outlet.	
NOTE	E: If needed, a short adaptor cable is stored in the trailer to enable connection of the trailer power cable to a standard 120V outlet.	
	 If utility power is not accessible, refer to: MCARC SOP 3.0: Setup and Operation of the Gasoline Powered Generator 	

GENERATOR SET-UP

SOP 3.0 Gasoline Powered Generator Setup & Operation

[Gasoline powered generator is utilized if a utility power source is not available]

Perform each of the following steps in the order shown and indicate completion of each step by placing a check (\checkmark) in each box once the step is verified complete. If any step cannot be performed as stated, STOP and obtain help before proceeding.

NOTE: AC Breakers in the trailer are normally left in the "ON" position, with the exception of the breaker that controls the interior fluorescent lights.

	UNHOOK straps securing the generat	or inside the trailer
□ DISCONNECT generator battery charger before moving generator		rger before moving generator
☐ MOVE the generator outside of the trailer using the attached hoist		
	LOCATE generator on a level area aveconnect the power cable to located on the side of the tr	the outside recepticle of the trailer
	CONNECT one end of the power cab outside of the trailer and sta DO NOT connect cable to	age the other end near the generator, but
<u>GENE</u>	ERATOR OPERATION	
	ENSURE the generator engine key sw the generator main panel are in	
	-	gauge on top); Oil (fill to lip of fill port) &
	Coolant (located under top l	
	TURN generator fuel valve counterclo	
	÷	t panel of the generator out to the START
	START generator by turning the starti	ng switch key located on the front panel of the ion and HOLD it in that position until the
	ALLOW generator/engine to run.	
	 ☐ PUSH the choke lever in to the RUN position once the engine has warmed up. ☐ CONNECT the power cable to the appropriate recepticle on the generator 	
☐ PLACE the AC breaker on the generator main panel in the ON position.		tor main panel in the ON position.
	ENSURE DC power switches in the trickle charging of the traile	*
The above ste	ps were completed by:	Date:

SOP 4.0 Gasoline Powered Generator Refueling

[Gasoline powered generator is utilized if a utility power source is not available]

Perform each of the following steps in the order shown and indicate completion of each step by placing a check (\checkmark) in each box once the step is verified complete. If any step cannot be performed as stated, STOP and obtain help before proceeding.

<u>GEN</u>	NERATOR REFUELING (after generator has been running)
	NOTIFY everyone operating equipment inside and outside the trailer that the generator will be shut down in 5 minutes so they can transfer power to battery or shutdown equipment.
	LOCATE and obtain the fire extinguisher from inside the trailer. <u>DO NOT</u> attempt to refuel a hot generator unless you have a second person standing nearby with the fire extinguisher ready to use it during the refueling of the generator should a flame or fire erupt.
	ANNOUNCE that the generator is being shut down. (5 minutes has elapsed)
	PLACE the generator power switch/breaker in the OFF position.
	STOP the generator engine by turning the starting switch key located on the front panel of the generator to the OFF position and observe that the engine comes to a complete stop.
<u> </u>	WARNING: GASOLINE IS HIGHLY FLAMMABLE AND EXPLOSIVE. POUR CAREFULLY TO AVOID SPILLAGE.
	REMOVE gasoline fill cap from top of generator and add gasoline slowly, watching the tank level gauge but DO NOT fill above the level of the top shoulder of the strainer.
	REPLACE gasoline fill cap, and wipe up any minor drips or spills.
	ANNOUNCE that the generator will be restarted.
	START generator by turning the starting switch key located on the front panel of the generator to the START position and HOLD it in that position until the engine starts.
	PLACE generator power switch in the ON position once the engine reaches a consistent operating speed.
	OBSERVE that the generator operates without problems for a couple of minutes
	before storing the fire extinguisher.
	before storing the fire extinguisher. STORE gasoline container in a shady location a safe distance from the generator. (DO NOT store gasoline inside the trailer, especially while personnel are operating equipment)

SOP 5.0 Antenna Setup for Trailer Communications Equipment

CAUTION: ENSURE THE AREA SURROUNDING THE TRAILER IS FREE FROM OVERHEAD POWERLINES OR OTHER HAZARDS THAT COULD COME IN CONTACT WITH ANTENNAS AT ANY TIME.

Perform each of the following steps <u>in the order shown</u> and indicate completion of each step by placing a check (\checkmark) in each box once the step is verified complete. If any step cannot be performed as stated, STOP and obtain help before proceeding.

		LOCATE the desired antenna(s), antenna masts, mast mounts and coax required.
		<u>Mast sections</u> are stored in the large PVC tube mounted on top of the overhead cabinets in the trailer.
		<u>Nantenna Elements (HamSticks)</u> are stored on top of the overhead cabinets behind the PVC pipe containing the mast sections. Each element is labelled as to the band (frequency) of use.
		<u>NamStick Mast Mount</u> is stored in the black toolbox near the trailer door.
		©Coax sections are stored in a labeled plastic bin inside the trailer.
		ROUTE coax through weatherproof penetration in the side wall of the trailer below the overhead cabinets.
		ASSEMBLE antenna mast mount and antenna elements (HamStick) or VHF/UHF antenna.
		CONNECT coax to the antenna.
of the trailer and secure with a pin/clip.		POSITION the lower end of the mast into the swivel mount found on the fender of the trailer and secure with a pin/clip.
		WALK the antenna mast to a vertical position and secure it in the upper bracket, using a pin/clip to secure the mast.
		CHECK both lower and upper mast brackets a second time, ensuring both are positioned correctly and clips are <u>secure</u> .
	NOTE: If a dipole or other wire antenna is to be erected, route the feedline (ladderline or coax) through the weatherproof penetration in the trailer wall. Use caution stringing a dipole to ensure it cannot come in contact with any powerlines.	
		CONNECT coax to the appropriate radio/tuner inside the trailer and perform a tuning check at low power to ensure proper installation/operation.
The ab	ove ste	ps were completed by: Date:
Anteni	na(s) in	stalled:

SOP 6.0 Gasoline Powered Generator Shut-down & Storage

[Gasoline powered generator is utilized if a utility power source is not available]

Perform each of the following steps in the order shown and indicate completion of each step by placing a check (\checkmark) in each box once the step is verified complete. If any step cannot be performed as stated, STOP and obtain help before proceeding.

GEN	NERATOR SHUT-DOWN (after generator has	s been running)
	NOTIFY everyone operating equipment in that the generator will be shut down transfer power to battery <u>or</u> shutdow	n in 5 minutes so they can
	ANNOUNCE that the generator is being sl	hut down. (5 minutes has elapsed)
	PLACE the generator power switch/breake	er in the OFF position.
	TURN the generator fuel valve clockwise t	from the ON position to the OFF
position and allow the engine to run out of gas and come to a stop.		_
	PLACE the generator starting switch key t	to the OFF position.
	WARNING: THE GENERATOR AND GA FROM OPERATION. ALLOW IT TO CO HOIST IN INTO THE TRAILER FOR ST	OOL BEFORE ATTEMPTING TO
	NOTE: IT IS RECOMMENDED TO HAVI SAFELY MOVE AND STORE THE GE	
	MOVE the generator from its operating sit	e to the rear of the trailer.
	ROTATE the lifting hoist arm to enable lift	fting of the generator
	ATTACH the lifting cables to the generate	or and the hoist.
	VERIFY all lifting cable connections, clan the lift	mps, etc., are secure before attempting
	ENSURE all personnel are clear of the gen	nerator before beginning the lift
	ROTATE the lifting hoist arm to position in the trailer.	the generator over its storage position
	LOWER the generator to its storage position	on and secure it in place
	SECURE the lifting hoist	-
	CONNECT generator battery charger	
	PERFORM a final check that all equipment	nt is secure and all cables, etc., have
	been stored properly	, ,
The above s	steps were completed by:	Date: